



## **Solar Controller For Home use**

## PRIP-DN4850



System voltage	DC 2
Self-consumption	Max
Equalize charging voltage	29.2
Float charging voltage	27.6
Under voltage warning protection	24V/
Low voltage reconnect voltage	25V/
Terminals	35mr
Overload protection	37.5/

24V/48V auto work	Rated current
(30mA	Open circuit voltage of solar p
2V/58.4V	Boost charging voltage
6V/55.2V	Reconnect charging voltage
/48V	Low voltage disconnect volta
/50V	Temperature compensation
1m²	Working temperature
5A/60s or 45A/5s	Reverse polarity protection

	50A
panel	64V
	28.8V/57.6V
;	26.4V/52.8V
age	21.4V/42.8V
	-4mV/cell/°C
	-35°C ~ 55°C
	Battery

Packing:48.0 x 45.0 x 39.0 cm / 24pcs / 20kg

## PRIP-E2410 / PRIP-E2420 / PRIP-E2430



System voltage	DC 12V/24V auto work	Rated current	10A/20A/30A
Self-consumption	Max 30mA	Open circuit voltage of solar panel	50V
Equalize charging voltage	14.6V/29.2V	Boost charging voltage	14.4V/28.8V
Float charging voltage	13.8V/27.6V	Reconnect charging voltage	13.2V/26.4V
Under voltage warning protection	12V/24V	Low voltage disconnect voltage	10.7V/21.4V
Low voltage reconnect voltage	12.5V/25V	Temperature compensation	-4mV/cell/°C
Terminals	10mm²	Working temperature	-35°C ~ 55°C
Overload protection	37.5A/60s or 45A/5s	Reverse polarity protection	Battery
			•

Packing(10A):49.0 x 36.0 x 20.0 cm / 40 pcs / 12 kg

Packing(20-30A):54.0 x 43.0 x 22.0 cm / 30pcs / 15kg